

**Boxergodkendte fladskærme. Opdateret 14.08.2009**

	Maerke	tvtype	model
	Elfunk		26HD4
	Elfunk		32HD4
	Grundig	Toronto	32-7932 T
	Grundig	Toronto	37-7950 T
	Grundig	Toronto	42-7950 T
	Grundig	Vision	2 19-2940 T
	Grundig	Vision	2 22-2940 T
	Grundig	Vision	4 26-4940 T
	Grundig	Vision	4 32-4940 T
	Grundig	Vision	4 37-4940 T
	Grundig	Vision	4 42-4940 T
	Grundig	Vision	6 26-6840 T
	Grundig	Vision	6 32-6840 T
	Grundig	Vision	6 37-6840 T
	Grundig	Vision	6 42-6840 T
	Grundig	Vision	7 32-7952 T
	Grundig	Vision	7 37-7952 T
	Grundig	Vision	7 42-7952 T
	Grundig	Vision ECO	32-6941 T
	LG		32LH4000
	LG		32LH5000
	LG		32LH7020
	LG		37LH4000
	LG		37LH5000
	LG		37LH7020
	LG		42LH4000
	LG		42LH5000
	LG		42LH7020
	LG		42PS8000
	LG		47LH4000
	LG		47LH5000
	LG		47LH7020

	LG		50PS8000
	LG		55LH5000
	LG		60PS8000
	LG		19LU4000
	LG		19LU4010
	LG		19LU5000
	LG		19LU5010
	LG		19LU5020
	LG		22LH2000
	LG		22LU4000
	LG		22LU4010
	LG		22LU5000
	LG		22LU5010
	LG		22LU5020
	LG		26LH2000
	LG		26LU5000
	LG		26LU5010
	LG		26LU5020
	LG		32LF2500
	LG		32LH2000
	LG		32LH3000
	LG		32LH3800
	LG		32LH4020
	LG		37LF2500
	LG		37LH2000
	LG		37LH3000
	LG		37LH3800
	LG		37LH4020
	LG		42LF2500
	LG		42LH2000
	LG		42LH3000
	LG		42LH3800
	LG		42LH4020
	LG		42LH9000
	LG		42PQ3000

	LG		42PQ3500
	LG		42PQ6000
	LG		42PQ6500
	LG		47LH3000
	LG		47LH3800
	LG		47LH4020
	LG		47LH9000
	LG		50PQ3500
	LG		50PQ6000
	LG		50PQ6500
	LG		50PS7000
	LG		60PS7000
	LG		XXLH4020
	Loewe		68430D80
	Panasonic		TX-P58V10E
	Panasonic		TX-P65V10E
	Panasonic	LCD	TX-L26X10Y
	Panasonic	LCD	TX-L32G10E
	Panasonic	LCD	TX-L32GA11
	Panasonic	LCD	TX-L32S10E
	Panasonic	LCD	TX-L32U10E
	Panasonic	LCD	TX-L32V10E
	Panasonic	LCD	TX-L32X10Y
	Panasonic	LCD	TX-L37G10E
	Panasonic	LCD	TX-L37G15E
	Panasonic	LCD	TX-L37S10E
	Panasonic	LCD	TX-L37U10E
	Panasonic	LCD	TX-L37V10E
	Panasonic	LCD	TX-L42S10E
	Panasonic	LCD	TX-L42U10E
	Panasonic	PDP	TX-P37C10Y
	Panasonic	PDP	TX-P37X10Y
	Panasonic	PDP	TX-P42C10Y
	Panasonic	PDP	TX-P42G10E
	Panasonic	PDP	TX-P42G15E

	Panasonic	PDP	TX-P42GA11
	Panasonic	PDP	TX-P42GA11
	Panasonic	PDP	TX-P42S10E
	Panasonic	PDP	TX-P42U10E
	Panasonic	PDP	TX-P42V10E
	Panasonic	PDP	TX-P42X10Y
	Panasonic	PDP	TX-P46G10E
	Panasonic	PDP	TX-P46G15E
	Panasonic	PDP	TX-P46GA11
	Panasonic	PDP	TX-P46GA11
	Panasonic	PDP	TX-P46S10E
	Panasonic	PDP	TX-P46Z1E
	Panasonic	PDP	TX-P50C10Y
	Panasonic	PDP	TX-P50G10E
	Panasonic	PDP	TX-P50S10E
	Panasonic	PDP	TX-P50U10E
	Panasonic	PDP	TX-P50V10E
	Panasonic	PDP	TX-P50X10Y
	Panasonic	PDP	TX-P54Z1E
	Philips		32PFL9603H
	Philips		37PFL7403H
	Philips		37PFL9603H
	Philips		37PFL9903H
	Philips		42PES0001H
	Philips		42PFL7403H
	Philips		42PFL9603H
	Philips		42PFL9703H
	Philips		42PFL9803H
	Philips		42PFL9903H
	Philips		47PFL7403H
	Philips		47PFL9603H
	Philips		47PFL9703H
	Philips		52PFL9703H
	Philips		32PFL5404H/12
	Philips		32PFL5604H/12

	Philips		32PFL5624H
	Philips		32PFL7404H/12
	Philips		32PFL7674H
	Philips		32PFL7684H
	Philips		32PFL7694H
	Philips		32PFL7864H
	Philips		32PFL8404H/12
	Philips		32PFL9604H/12
	Philips		37PFL5604H/12
	Philips		37PFL8404H/12
	Philips		37PFL8684H
	Philips		37PFL8694H
	Philips		37PFL9604H/12
	Philips		42PFL5604H/12
	Philips		42PFL5624H
	Philips		42PFL7404H/12
	Philips		42PFL7674H
	Philips		42PFL7864H
	Philips		42PFL8404H/12
	Philips		42PFL8684H
	Philips		42PFL8694H
	Philips		42PFL9664H
	Philips		47PFL5604H/12
	Philips		47PFL7404H
	Philips		47PFL7864H
	Philips		47PFL8404H
	Philips		52PFL5604H
	Philips		52PFL7404H
	Philips		56PFL9954H/12
	Prosonic		26 LCD 26LF4
	Prosonic		26 LCD 26LF5
	Prosonic		32 LCD 32LZ7
	Prosonic		M32/03C-GW-HC-EU
	Prosonic		PBT-1948
	Prosonic		PBT-2248

	Prosonic		PBT-2336
	Prosonic		PBT-2360
	Prosonic		32LZ7W
	Samsung		LE19B455C4WXXE
	Samsung		LE26A466C2WXXE
	Samsung		LE26A467C1WXXE
	Samsung		LE32A446T1WXXE
	Samsung		LE32A447T2WXXE
	Samsung		LE32A465C1WXXE
	Samsung		LE32A466C2WXXE
	Samsung		LE32A467C1WXXE
	Samsung		LE32A566P1WXXE
	Samsung		LE32A567P2WXXE
	Samsung		LE32A568P3WXXE
	Samsung		LE32A569P4WXXE
	Samsung		LE32A676A1WXXE
	Samsung		LE32A676A1WXXE
	Samsung		LE32A766R1WXXE
	Samsung		LE37A446T1WXXE
	Samsung		LE37A447T2WXXE
	Samsung		LE37A466C2WXXE
	Samsung		LE37A467C1WXXE
	Samsung		LE37A566P1WXXE
	Samsung		LE37A567P2WXXE
	Samsung		LE37A568P3WXXE
	Samsung		LE37A569P4WXXE
	Samsung		LE37A676A1WXXE
	Samsung		LE37A696M1WXXE
	Samsung		LE37A696M1WXXE
	Samsung		LE40A446T1WXXE
	Samsung		LE40A447T2WXXE
	Samsung		LE40A465C1WXXE
	Samsung		LE40A466C2WXXE
	Samsung		LE40A467C1WXXE
	Samsung		LE40A566P1WXXE

	Samsung		LE40A567P2WXXE
	Samsung		LE40A568P3WXXE
	Samsung		LE40A569P4WXXE
	Samsung		LE40A676A1WXXE
	Samsung		LE40A676A1WXXE
	Samsung		LE40A696M1WXXE
	Samsung		LE40A766R1WXXE
	Samsung		LE40A796R2WXXE
	Samsung		LE40A866S1WXXE
	Samsung		LE46A566P1WXXE
	Samsung		LE46A567P2WXXE
	Samsung		LE46A568P3WXXE
	Samsung		LE46A569P4WXXE
	Samsung		LE46A676A1WXXE
	Samsung		LE46A676A1WXXE
	Samsung		LE46A696M1WXXE
	Samsung		LE46A766R1WXXE
	Samsung		LE46A796R2WXXE
	Samsung		LE46A866S1WXXE
	Samsung		LE46A966D1WXXE
	Samsung		LE52A566P1WXXE
	Samsung		LE52A567P2WXXE
	Samsung		LE52A568P3WXXE
	Samsung		LE52A569P4WXXE
	Samsung		LE52A676A1WXXE
	Samsung		LE52A676A1WXXE
	Samsung		LE52A766R1WXXE
	Samsung		LE52A866S1WXXE
	Samsung		LE55A966D1WXXE
	Samsung		PS42A466P2WXXE
	Samsung		PS42A467P1WXXE
	Samsung		PS50A466P2WXXE
	Samsung		PS50A467P1WXXE
	Samsung		PS50A486P1WXXE
	Samsung		PS50A566S2WXXE

	Samsung		PS50A567S3WXXE
	Samsung		PS50A568S1WXXE
	Samsung		PS50A676T1WXXE
	Samsung		PS50A766T1WXXE
	Samsung		PS58A676T1WXXE
	Samsung		PS63A766T1WXXE
	Samsung		LE19B546C4WXXE
	Samsung		LE19B655T6WXXE
	Samsung		LE22B455C4WXXE
	Samsung		LE22B546C4WXXE
	Samsung		LE22B655T6WXXE
	Samsung		LE26B355F1WXXE
	Samsung		LE26B455C4WXXE
	Samsung		LE32B355F1WXXE
	Samsung		LE32B455C4WXXE
	Samsung		LE32B535P7WXXE
	Samsung		LE32B546P7WXXE
	Samsung		LE32B555A5WXXE
	Samsung		LE32B556A6WXXE
	Samsung		LE32B557M2WXXE
	Samsung		LE32B558M3WXXE
	Samsung		LE32B655T2WXXE
	Samsung		LE32B656T3WXXE
	Samsung		LE32B657T4WXXE
	Samsung		LE32B658T5WXXE
	Samsung		LE37B535P7WXXE
	Samsung		LE37B555A5WXXE
	Samsung		LE37B556A6WXXE
	Samsung		LE37B557M2WXXE
	Samsung		LE37B558M3WXXE
	Samsung		LE37B655T2WXXE
	Samsung		LE37B656T3WXXE
	Samsung		LE37B657T4WXXE
	Samsung		LE37B658T5WXXE
	Samsung		LE40B535P7WXXE



	Samsung		LE40B546P7WXXE
	Samsung		LE40B555A5WXXE
	Samsung		LE40B556A6WXXE
	Samsung		LE40B557M2WXXE
	Samsung		LE40B558M3WXXE
	Samsung		LE40B655T2WXXE
	Samsung		LE40B656T3WXXE
	Samsung		LE40B657T4WXXE
	Samsung		LE40B658T5WXXE
	Samsung		LE40B755U1WXXE
	Samsung		LE46B535P7WXXE
	Samsung		LE46B555A5WXXE
	Samsung		LE46B556A6WXXE
	Samsung		LE46B557M2WXXE
	Samsung		LE46B558M3WXXE
	Samsung		LE46B655T2WXXE
	Samsung		LE46B656T3WXXE
	Samsung		LE46B657T4WXXE
	Samsung		LE46B658T5WXXE
	Samsung		LE46B755U1WXXE
	Samsung		LE52B755U1WXXE
	Samsung		LE55B655T2WXXE
	Samsung		LE55B656T3WXXE
	Samsung		LE55B657T4WXXE
	Samsung		LE55B658T5WXXE
	Samsung		PS42B435P2WXXE
	Samsung		PS42B455B1WXXE
	Samsung		PS42B456B2WXXE
	Samsung		PS50B435P2WXXE
	Samsung		PS50B455B1WXXE
	Samsung		PS50B456B2WXXE
	Samsung		PS50B535S2WXXE
	Samsung		PS50B555T4WXXE
	Samsung		PS50B556T3WXXE
	Samsung		PS50B565T7WXXE

	Samsung		PS50B655S1WXXE
	Samsung		PS50B855Y1WXXE
	Samsung		PS58B685T6WXXE
	Samsung		PS58B855Y1WXXE
	Samsung		PS63B685T6WXXE
	Samsung		UE32B6050VWXXE
	Samsung		UE32B7050WWXXE
	Samsung		UE32B7070WWXXE
	Samsung		UE40B6050VWXXE
	Samsung		UE40B7050WWXXE
	Samsung		UE40B7070WWXXE
	Samsung		UE40B8050XWXXE
	Samsung		UE46B6050VWXXE
	Samsung		UE46B7050WWXXE
	Samsung		UE46B7070WWXXE
	Samsung		UE46B8050XWXXE
	Samsung		UE55B7050WWXXE
	Samsung		UE55B7070WWXXE
	Sharp		LC32DH65S
	Sharp		LC32DH77S
	Sharp		LC37DH65S
	Sharp		LC42DH77S
	Sharp		LC46DH65S
	Sharp		LC46DH77S
	Sharp		LC52DH65S
	Sharp		LC52DH77S
	Sharp		LC32DH57S
	Sony		KDL-26E4000
	Sony		KDL-26E4020
	Sony		KDL-26V4500
	Sony		KDL-32E4000
	Sony		KDL-32E4020
	Sony		KDL-32V4500
	Sony		KDL-32V4710
	Sony		KDL-32V4720

	Sony		KDL-32V4730
	Sony		KDL-32W4000
	Sony		KDL-37V4500
	Sony		KDL-40E4000
	Sony		KDL-40E4020
	Sony		KDL-40EX1BAEP
	Sony		KDL-40EX1SAEP
	Sony		KDL-40W4000
	Sony		KDL-40W4210
	Sony		KDL-40W4220
	Sony		KDL-40W4230
	Sony		KDL-40W4500
	Sony		KDL-40W4710
	Sony		KDL-40W4720
	Sony		KDL-40W4730
	Sony		KDL-40Z4500AEP
	Sony		KDL-40ZX1AEP
	Sony		KDL-46EX1BAEP
	Sony		KDL-46EX1SAEP
	Sony		KDL-46W4000
	Sony		KDL-46W4210
	Sony		KDL-46W4220
	Sony		KDL-46W4230
	Sony		KDL-46W4500
	Sony		KDL-46W4710
	Sony		KDL-46W4720
	Sony		KDL-46W4730
	Sony		KDL-46Z4500AEP
	Sony		KDL-52EX1BAEP
	Sony		KDL-52EX1SAEP
	Sony		KDL-52W4000
	Sony		KDL-52W4500
	Sony		KDL-52Z4500AEP
	Sony		XEL-1BAEP
	Sony		KDL-32E5500K

	Sony		KDL-32E5520K
	Sony		KDL-32V5500K
	Sony		KDL-32V5610K
	Sony		KDL-32W5500K
	Sony		KDL-32W5710K
	Sony		KDL-32W5740K
	Sony		KDL-40E5500K
	Sony		KDL-40E5520K
	Sony		KDL-40V5500K
	Sony		KDL-40V5610K
	Sony		KDL-40W5500K
	Sony		KDL-40W5710K
	Sony		KDL-40W5740K
	Sony		KDL-40WE5BAEP
	Sony		KDL-40WE5WAEP
	Sony		KDL-46V5500K
	Sony		KDL-46V5610K
	Sony		KDL-46W5500K
	Sony		KDL-46W5710K
	Sony		KDL-46W5740K
	Sony		KDL-46WE5BAEP
	Sony		KDL-46WE5WAEP
	Sony		KDL-52V5500K
	Sony		KDL-52W5500K
	Toshiba		55ZV635DN
	Toshiba		26AV635DG
	Toshiba		32AV635DN
	Toshiba		32AV636DN
	Toshiba		32LV685DN
	Toshiba		32RV635DN
	Toshiba		32RV685DN
	Toshiba		32XV635DN
	Toshiba		37RV635DN
	Toshiba		37RV685DN
	Toshiba		37XV635DN

	Toshiba		37ZV635DN
	Toshiba		40LV685DN
	Toshiba		42AV635DN
	Toshiba		42RV635DN
	Toshiba		42RV635DN
	Toshiba		42RV635DN
	Toshiba		42RV685DN
	Toshiba		42RV685DN
	Toshiba		42XV635DN
	Toshiba		42ZV635DN
	Toshiba		46XV635DN
	Toshiba		47ZV635DN
	Toshiba		55sv685dn